


**Plan View of X-Vent**

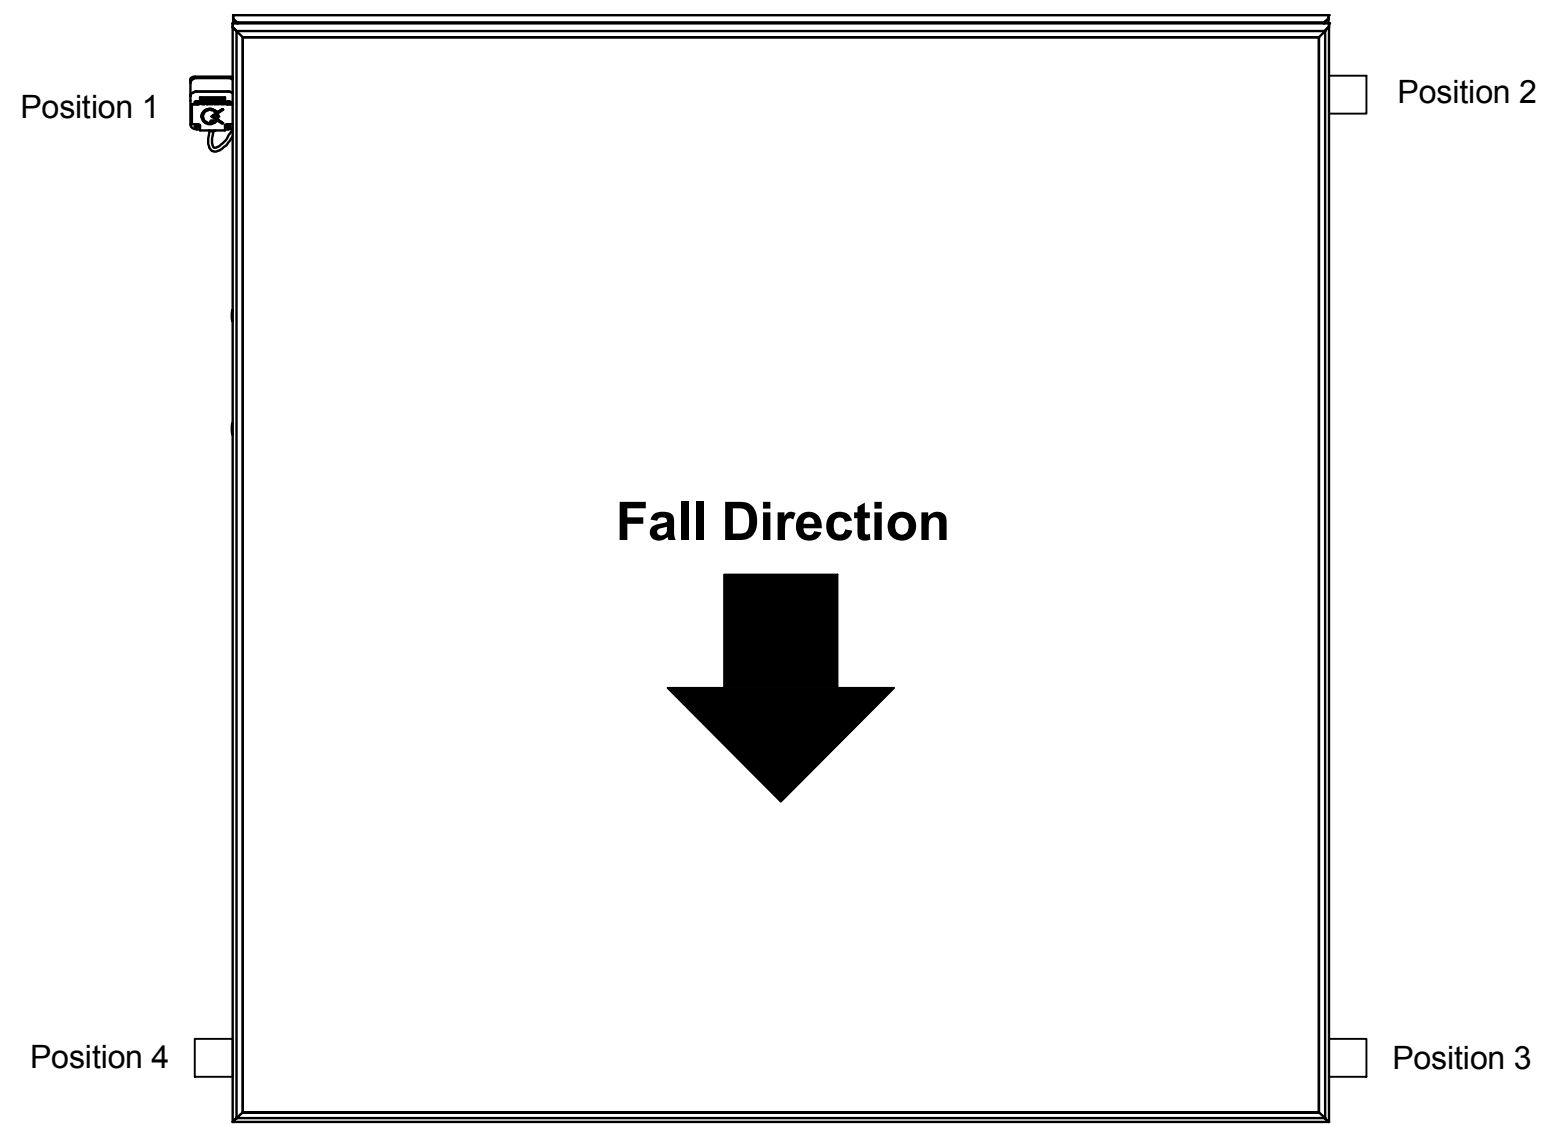

When a rain sensor is required the customer is to specify a mounting position at time of order to maximise exposure to the elements and avoid being in the rain shadow of the building.

There are five positions for the rain sensor. Either rooflight mounted (positions 1-4) or externally mounted with flying lead (position 5)

**NOTE: The rain sensor is an optional extra**

| Rev | Revision Description | Drawn/Date      |
|-----|----------------------|-----------------|
| -   | Initial release      | JWL<br>12.02.14 |

|   |                             |                                |
|---|-----------------------------|--------------------------------|
| <b>Product:</b> 406 GV Standard X-Vent    |                             | <b>Checked By:</b><br>PGW      |
| <b>Description:</b> Rain sensor positions |                             |                                |
| <b>Materials:</b> N/A                     | <b>Drawn By:</b> JWL        | <b>Check Date:</b><br>12.02.14 |
| <b>Finish:</b> N/A                        | <b>Drawn Date:</b> 12.02.14 |                                |
| <b>Weight:</b> N/A                        | <b>Quantity:</b> N/A        | <b>Drawing No:</b> 405-ASS-406 |
| <b>Scale:</b> 1:10                        |                             |                                |