

GLAZINGVISION

Operation and Maintenance
Manual

Skydoor

Contents

Section Description	Page
Introduction	3
Safety Information	4
Controls and Operation	6
Product Safety	9
Manual Override	10
Troubleshooting	15
Glass Specification and Breakage Instructions	16
Routine Testing and Maintenance	17
Disposal at End of Life	18
Security and Certification	18
Serial Number	19
Warranty Information	19
Maintenance Log	20

Introduction

Thank you for purchasing a Glazing Vision Skydoor. We hope that it gives you many years of service. The Skydoor is a thermally efficient opening product designed to allow access from a stairwell to a roof terrace or similar, ideal for placement at the top of a staircase. The product can be opened to nearly 90° for access, or various angles for ventilation as required. Glazing Vision highly recommends that for safety reasons a balustrade is installed (by others) around the Skydoor if it is to be used for access – the lid can be used as a balustrade on one side.

The product is intended to be used for regular access, to provide natural daylight, day-to-day ventilation and weather resistance.

A variety of optional extras including a rain sensor, thermostat, remote control and Building Management System connectivity are available. Proximity detection (safety sensors) is included on every product as standard.

This product is robust and long-lasting, boasting excellent thermal performance, air tightness and reliable operation.






Servicing and maintenance must only be carried out by suitably qualified personnel. Care should be taken when working on the product, avoiding accidental damage and ensuring operational reliability. The mechanisms are very powerful, **at no time should hands or arms work through the mechanisms, always work around them.** Maintenance requirements can be found within this manual and maintenance log records must be completed to ensure the unit performs as required and the warranty is not invalidated.

Should you have any queries beyond this manual please do not hesitate to contact Glazing Vision.



Safety Information

Accessing your rooflight in order to carry out routine maintenance may involve working at heights, working at an unusual angle, being in unfamiliar locations or all of these. **Before** work is commenced, stop and consider the best way to carry out the task and what hazards you might encounter.

	<p>Let our experts carry out your routine maintenance with a maintenance contract.</p> <p>☎ +44 (0)1379 658300</p> <p>✉ info@glazingvision.co.uk</p>
	<p>Consider:</p> <ul style="list-style-type: none"> • How you will safely access your rooflight to carry out maintenance. • Any openings, voids or unprotected edges that might pose a significant risk whilst working at height. • Using an elevated platform, cherry picker or scaffolding in preference to a ladder. • If specialist access is needed. • What personal protective safety equipment is required. • How you will transport equipment to the rooflight. • How you will work so as not to drop equipment. • Your personal capability to safely carry out the task. • Wearing suitable clothing so as not to snag or catch on things. • Impact of weather on the task, especially driving rain and high winds. <p>If in doubt, please contact Glazing Vision for assistance.</p>
	<p>Anticipated hazards may include:</p> <ul style="list-style-type: none"> • Falls from height. • Unsafe use of ladders. • Equipment falling from height. • Slips, trips and falls. • Fragile roof areas. • Finger or clothing entrapment in mechanical or moving parts. • Working with electricity.
	<p>Do not attempt to repair, move or dismantle the product unless suitably competent and qualified to do so, with the appropriate safety measures in place. Any repairs and/or movement of the product may invalidate the warranty. Please seek advice from Glazing Vision.</p>
	<p>Any electrical work is to be carried out by a qualified and competent electrician in accordance with Glazing Vision's wiring diagram(s).</p>



Warning

The following warnings are here to prevent personal injury and damage to the product. Please follow them explicitly.

- The product must be properly installed and commissioned in accordance with the installation manual before it is used.
- Use the product only for its intended purpose.
- Regular cleaning and maintenance must be carried out according to the guidelines described in this manual.
- Glazing Vision strongly recommends that any work is carried out by suitably qualified individuals (e.g. Glazing Vision trained personnel or contractors, or an experienced electro-mechanical service engineer).
- Do not touch the motors/mechanisms after operating the product as they may become hot.
- Do not walk or sit on the unit (except for the dedicated treadplate).
- Risk of crush and/or trapping injuries. Make sure that fingers and other obstructions are kept clear of the product and its mechanisms at all times. Proximity (safety) sensors are fitted as standard, however care must still be taken.
- Overcurrent protection is designed to prevent damage to the product and its mechanisms. It should not be relied upon to prevent injuries.

- Do not place anything on, or cause obstruction to, the moving sections of the product as this may cause damage to the mechanisms/product and/or prevent the unit from opening/closing.
- Do not allow unauthorised persons (e.g. children) to operate the product as this may lead to personal injury or damage to the product. Do not leave children or pets unsupervised near the product – it may open/close unexpectedly (e.g. due to the rain sensor activating) and cause injury.
- Do not pull on the cables where they exit the product. Doing so may loosen connections, result in damage to the product and/or create the need for a repair visit.
- Do not leave the product open in the rain, this could damage the control board and/or mechanisms. If required, a rain sensor can be specified at the time of order.
- Should any cables or electrical components break or become damaged, have them repaired or replaced immediately. Deteriorated insulation of electrical parts or overloading may cause an electric shock or fire.
- Do not knock or damage the proximity sensors so they become misaligned as that will prevent the product from operating.

For more information or assistance please contact Glazing Vision.

Controls and Operation

Various options are available at time of order. If specific data is required for your product, please refer to your order confirmation or contact your supplier for assistance.

Control Switch

The standard operation of the unit is via the supplied wall mounted control switch and can be operated using two different methods as explained below:

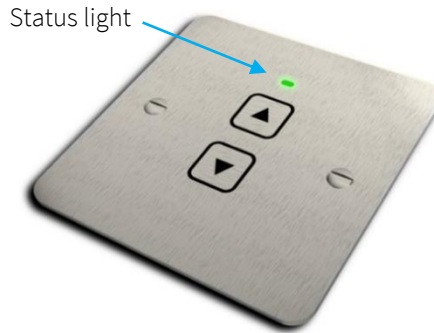


Figure 1 – Wall mounted control switch

‘One touch’ operation – A press of up to 5 seconds will be interpreted as one touch. Press and release the control switch once in either the up or down direction - the product will open or close fully. Partially open positions can be achieved by pressing the control switch again at any point during the open or close cycle.

Conventional ‘hold’ operation – Press and hold the control switch until the product has reached the desired position. Releasing the switch stops the product in that position (as long as the control switch has been pressed for more than the 5 seconds recognised as ‘one touch’ operation). Note that the product will stop automatically when it becomes either fully open or closed.



Do not leave your product open in rain or inclement weather. Glazing Vision cannot be held responsible for damage caused by failure to comply with this instruction.

Status Light

The status light will illuminate green if the product is functioning normally. If the status light displays another colour, please refer to the troubleshooting section of this document.

Remote Control (Optional)

The remote control unit functions in the same way as the wall mounted control switch but allows you to open and close your product from a short range. It has 3 control buttons, open, stop and close - the stop button can be used for partial opening.

The remote control is powered by 2 x AAA batteries. In order to preserve the batteries, the remote control will switch itself off after a brief period of inactivity. It will switch itself on when any of the buttons on the remote control are pressed. To replace the batteries, remove the small hex screws found on the rear of the remote to allow access inside. Note the polarity when inserting the new batteries.

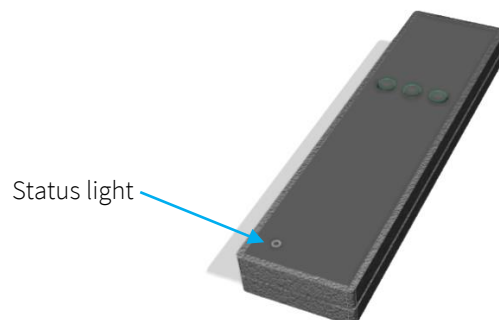


Figure 2 – Remote control

Pairing a Remote Control

Additional remote controls can be paired to or unpaired from the product. To put the product into pairing mode and prepare it for adding or removing a remote control follow these steps:

1. Ensure that the product is fully closed.
2. Press and hold the CLOSE (down arrow) button on the wall-mounted control switch.
3. Still holding the CLOSE button, press and hold the OPEN (up arrow) button.
4. As soon as the status light starts flashing, release both buttons.

The control switch status light will now flash red and blue alternately for 2 minutes. You now have a 2 minute window in which to pair the remote to the product.

To Add a Remote

Press any of the buttons on the remote control during the 2 minute pairing window. Wait for approximately 30 seconds and then press either the open or close buttons (this needs to be done before the 2 minutes are up). The remote control should now be paired to the product. When using the remote control its status light will illuminate green when the product is in motion.

To Delete a Remote

Ensure there has been at least 2 minutes since either the product was first powered up or from when the pairing procedure was initiated (i.e. you are not in the 2 minute pairing window). Press all three buttons on the remote control together and immediately release them. The status light on the remote control should turn red for a few seconds and then turn off. If it turns green or amber, try pressing the three buttons again. When the red status light turns off, the remote will be unpaired from the product.

Rain Sensor (Optional)

The rain sensor automatically closes the product when moisture is detected. When the product is opened it activates the built-in low power heater to evaporate any surface moisture (this will remove condensation/dew but not large amounts of standing water or ice). If moisture is still detected, the product will close on the assumption that it is raining (the status light will illuminate green). The control switch status light will also flash intermittent green indicating a closure due to rain. The rain sensor should be positioned horizontally (in line with the ground) in a location that will ensure that it is exposed to the rain and must be kept clean to function correctly.



Figure 3 – Rain sensor

Rain Sensor Isolation Switch (Optional)

The rain sensor isolation switch is internally mounted and wired directly to the rain sensor cable, allowing the sensor to be switched on/off. Turning off the switch deactivates the signal from the rain sensor and prevents the product from closing in the event of rain. This avoids the scenario where someone could be shut outside by the rain sensor when it rains. Ensure that the switch is turned back on for normal use.



Figure 4 – Rain sensor isolation switch

Thermostat (Optional)

The thermostat offers control of the product to regulate the temperature within the building. For security reasons, when the property is unoccupied, the thermostat should be switched off and the product closed.

External Keypad (Optional)

The keypad option offers secure access into the product from the outside via a numerical pass code. To open or close the product, enter the four-digit numerical code (Glazing Vision supplies an initial code with the product and instructions for changing it as required). Unlike the standard internal wall switch, the keypad does not offer 'press and hold' operation. The keypad is mounted remotely.



Figure 5 – External keypad

External Key Switch (Optional)

The key switch option offers the same function as the keypad but via a key operated switch. In addition, the key switch does offer 'press and hold' operation. To open the product, turn the key in a clockwise direction. To close the product, turn the key in an anti-clockwise direction.

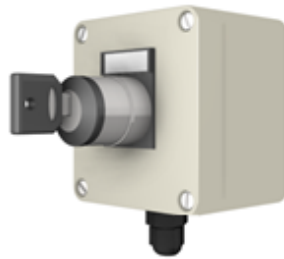


Figure 6 – External key switch

Battery Backup (Optional)

The battery backup supply provides an uninterruptable power source (24V DC) in the event of a mains power failure. It houses a 24V power supply, an Uninterruptable Power Supply (UPS) switch and two 5Ah batteries. This will allow full operation of the product for a limited period in the event of a power failure. The battery backup will resume normal operation once mains supply is restored. The battery backup is protected with a 15A breaker switch. Please note that mains power must be applied to the UPS before the DC output is activated. **Product use should be kept to a minimum during mains failure to maintain battery efficiency.**



Figure 7 – Battery backup supply

Building Management System Integration (Optional)

The product can be connected to building management systems. Please contact Glazing Vision for further details if required.

Product Safety

The Skydoor has six infrared photoelectric sensors positioned along the treadplates around three sides of the product. On each side one sensor emits a beam which is received by the other during normal operation. If this beam is obstructed by any object the lid will immediately stop moving to prevent damage to the framework, mechanisms or object and prevent entrapment. Until the path of the beam is cleared the product will not operate. This offers protection against trapping fingers or limbs at the sealing edge.

These sensors **do not** offer protection against the other edges of the product and only protects along the inside face. To avoid serious injury or damage to the product, do not place anything in or near to the product's mechanisms. Care must always be taken around motorized equipment. Do not allow unauthorized persons (e.g. children) to operate or play near the product.

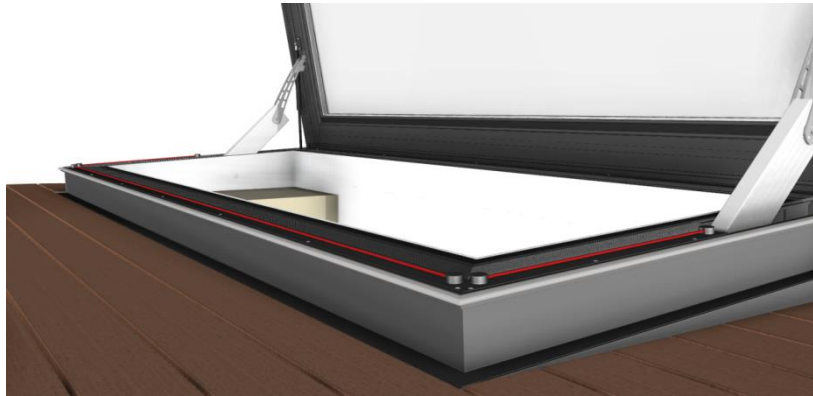


Figure 8 – Infrared safety beam sensors

Manual Override

Manual Override should only be attempted in Emergency circumstances, as requires the removal of both actuators.

Before attempting a manual override check that mains power is present and, if the Rooflight is open, that there are no obstructions blocking the path of the safety sensors (see fig 8) . Also inspect the GV control switch for any LED status indications. If there is an issue with the safety sensors there will be a solid Amber LED. In this case, attempt to electronically override the Product by pressing the override push button located on the opening inside edge of the base frame (circled in fig 9 below).

Gently remove the cover cap to reveal the override push button, being careful not to damage the internal finishes. To operate, push the override button and at the same time press the open or close button of the GV control switch or remote control (a second person will be required if the control switch is out of reach). If there are no other issues the Amber LED should go out and the Product will open/close. If closing the product, ensure you move safely down the stairs inside the building. The override push button must be held pressed until the Product stops. Contact your local representative or Glazing Vision for further assistance on troubleshooting the safety sensors.

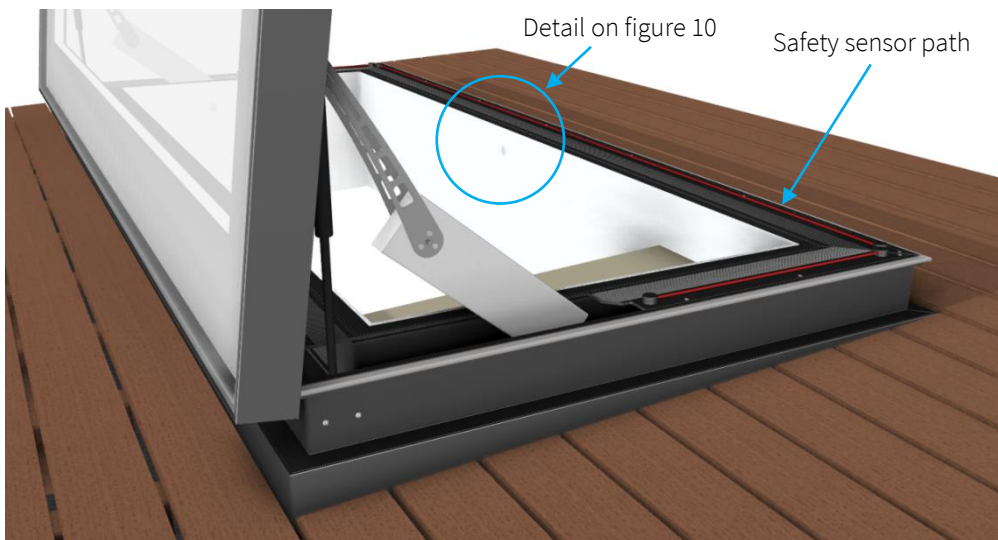


Figure 9 – Safety sensor override position.

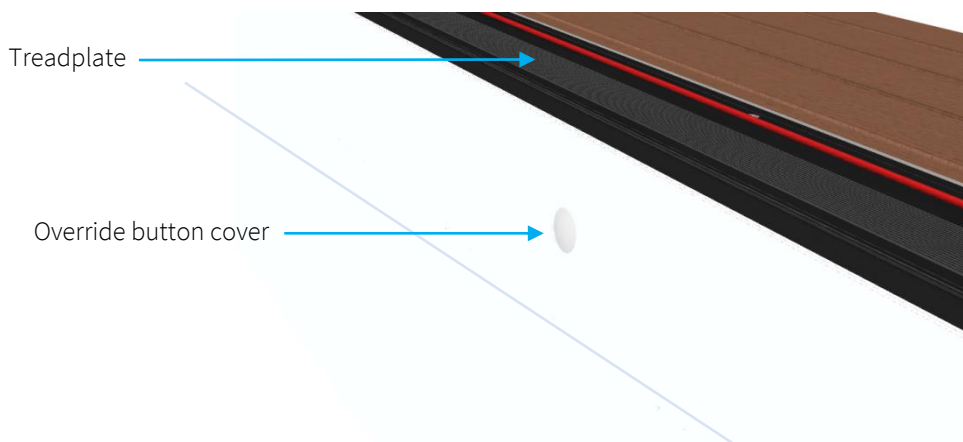


Figure 10 – Safety sensor override

If an Electronic attempt to override the product fails, then the actuators can be manually overridden to either open or close the product. A slide hammer tool (see fig 11 below) will be required if the Product is fully closed (or partially open and actuators not fully accessible).



Figure 11 – Slide Hammer Tool.

Stuck Open

If the Product is stuck in an open position and will not close electronically, the actuators can be removed to allow the lid to be closed manually (only the actuators need to be removed; the gas struts and springs, if present, should be left in place). Manual override can be performed from the inside. **Do not attempt to manually override the product without a safe working platform.**

Remove the actuator arms from the slide pin of the upper actuator mounting bracket (the 10mm circlips will need removing first, see fig 12 below). Apply controlled outward pressure to the actuator arms to release them from the pin. Be careful not to apply too much pressure as the arms of the actuators can bend easily. **Also, beware of the lid dropping or flying open – it will only be supported by the gas struts and springs if present.** If needed, prop the lid open on either side using two lengths of timber (it is important to use softwood to avoid damage to the aluminium extrusion). This will prevent the lid from falling when it is only partially open, and the actuators are disengaged. It is also advisable to have 2 people positioned to the side of the Product holding the lid taking up any force from the gas struts if the lid is close to the fully open position. **When working take care not to knock the supports out of place.**



Figure 12 – Lid override fixings

With the lid no longer supported by the actuators upper bracket, the weight of the lid should be supported manually (with the assistance of the gas struts/springs) allowing the timber supports to be removed and the lid positioned in the fully open position.

Depending on how far the lid is open, it may be possible to remove the bottom bracket by undoing the two 5mm Allen bolts (see fig 15 below). If the angle of the lid/actuators prevents this, then follow the instructions below in the “**stuck closed**” section for using the slide hammer tool.

The actuator cables will need to be separated at the plug and socket connectors before the actuators can be fully removed. If the plug and socket are not fitted the cable will need tracing back to the controller enclosure under the front tread plate and disconnected from the relevant connecting plugs. Do this for both actuators present.

The lid can then be lowered slowly (take care – it will be heavy), ensuring not to damage anything. **Do not attempt to lower the lid without a safe working platform and take extreme care if walking down any stairs as the lid is lowered.** The product should now be watertight, but not secure.

Please contact Glazing Vision for further assistance – the product will no longer be operational. Once the issue is resolved, the product should be reassembled then re-initialised.

Stuck Closed

If the Product is stuck in the closed position and will not open electronically, the actuators can be disconnected to allow the lid to be opened manually (only the actuators need to be disconnected; unless they are at fault the gas struts should be left in place).

Manually overriding the Product from the closed position is best done when an engineer is on hand to resolve the issue. Manual override must be performed from the inside. **Do not attempt to manually override the product without a safe working platform.**

Remove the cover caps from the base extrusion on either side of the product (see fig 13 below).

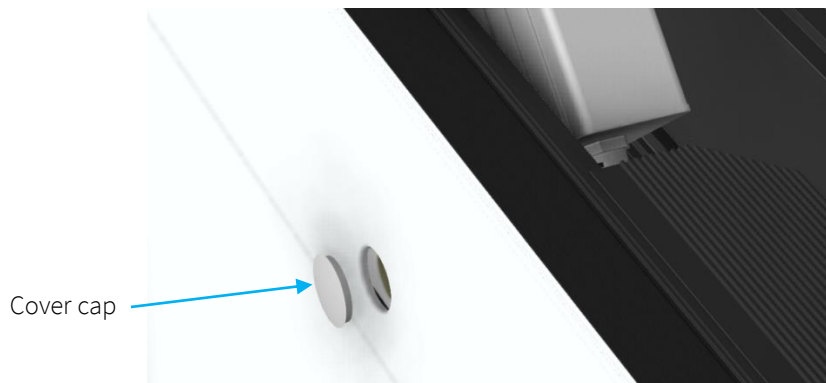


Figure 13 – Remove cover caps.

If the Product has never been manually overridden in the past there will be insulation material in front of the actuator bottom bracket. In this case, a sharp knife can be used to cut out an access hole in the insulation material. It may be necessary to shine a light through the hole to locate the position of the bottom bracket and Allen bolt (see fig 14 below).

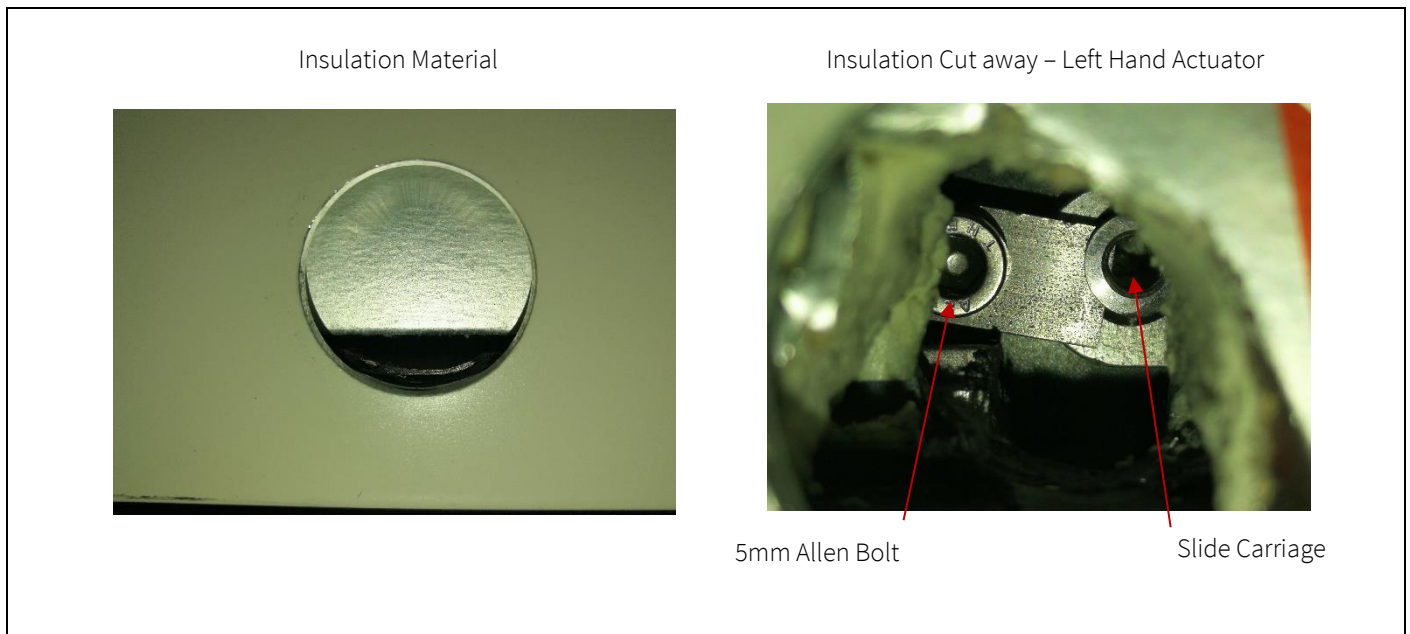


Figure 14 – Override Access with Cap Removed

Use a 5 mm Allen key inserted through the access hole to remove the bolt which secures the bottom carriage pin in place (see fig 15 below). Insert the threaded end of the slide hammer tool into the carriage pin and rotate in a clockwise direction until you feel resistance. Tap the carriage pin out of the bottom mounting bracket which will release the actuator allowing the lid to be raised. **If following this procedure when the Product is part open, ensure that the lid does not fall as you do this** (it should still be balanced on the gas struts/timber supports). Take care when opening the lid as the actuators will still be attached, so make sure that they do not swing about as this may damage the paint and/or framework. The actuator cable may also pull tight when opening so inspect when raising the lid to ensure they are not damaged. There should be some slack under the side tread plate so a gentle pull on the cable should give more length to prevent this from happening. The cables will need to be separated at the plug and socket, however, if they are not fitted the cables will need tracing back to the controller enclosure under the front tread plate and disconnected from the relevant connecting plugs. Do this for both actuators present.

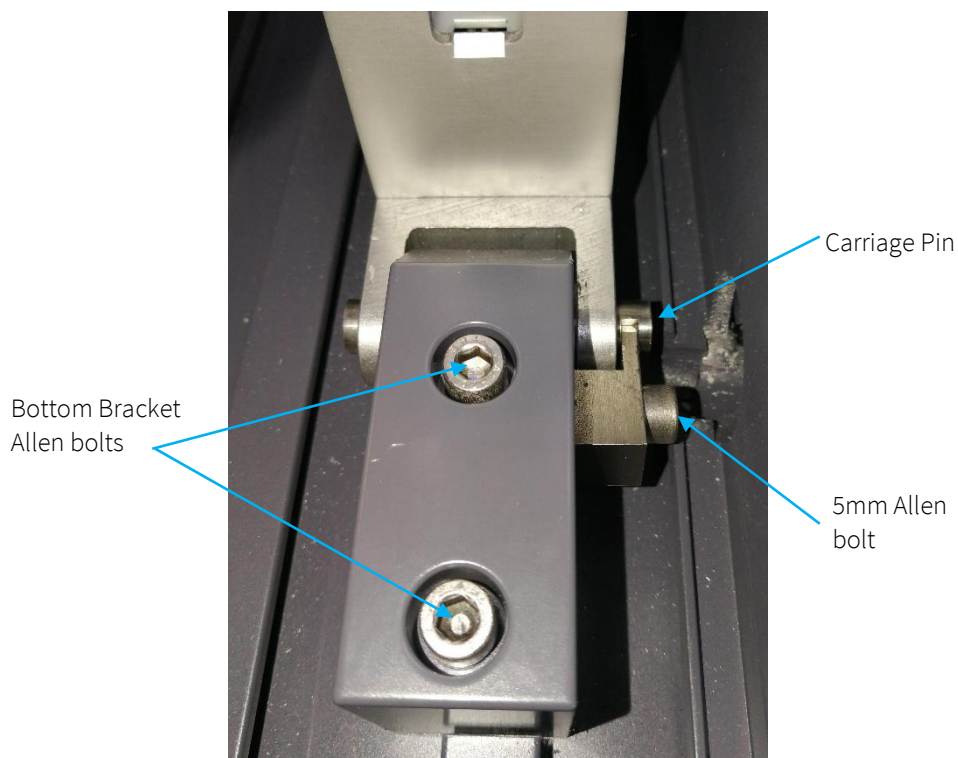


Figure 15 – Base override fixings

Follow the procedure detailed in the Stuck Open section above for removing the upper mounting bracket from the lid. Once disconnected the lid will only be supported by the gas struts and should not be left unattended. If the actuators are not refitted the lid can then be lowered slowly (take care – it will be heavy), ensuring not to damage anything. **Take extreme care if walking down any stairs as the lid is lowered.** The product should now be watertight, but not secure.

Re-Initialisation

If the manual override has been used the product may require re-initialising. Once mains power has been restored, re-initialise the product by pressing close on the control switch. The product is then ready to resume normal service.

If further assistance is required, contact Glazing Vision to arrange for an engineer to visit and resolve the issue.

Troubleshooting

The Skydoor control board monitors the operation of the product. If a fault is detected, the control board will disable the unit to prevent possible damage. Fault and standard conditions are indicated by the status light on the control switch (figure 1). The following table shows the various status light displays and their meanings.

Status Light Shown	Meaning
Continuous green	The product is moving as part of normal operation. If one touch opening/closing has been activated, the status light will remain lit until the product stops moving.
Intermittent green (flashes every second)	The product is closing but not under control of the operating switch or remote control e.g. due to an optional extra (such as a rain sensor) activating. The status light will continue flashing until the product stops moving.
Intermittent green (flashes once every 2 seconds)	The fire input connection (if specified) has been triggered. The status light will remain lit when opening to the fire position and when stationary afterwards so long as the fire input is still active.
Continuous blue	Indicates that the product has timed out (has taken too long to open/close). This is to avoid continuous operation of the motor(s) when there is a potential issue. So long as the cause has been rectified, pressing the open/close button will clear this condition.
Intermittent blue	Indicates an overcurrent or undercurrent condition (the current that the motor(s) are receiving is outside of the set limits). So long as the cause has been rectified, pressing the open/close button will clear this condition.
Continuous red (after power on/fault recovery)	Indicates that the product requires initialisation/synchronisation. Pressing close on the wall mounted switch will initiate synchronisation of the mechanism(s). The status light will flash red whilst this is in progress.
Intermittent red (after power on/fault recovery)	Indicates that the product is initialising/synchronising. The condition will clear automatically when the product has initialised.
Continuous amber	Indicates that a proximity (safety) sensor has been triggered preventing the product from closing (it will still open). Once the object(s) obstructing the path of the sensor has been cleared, normal product operation will be resumed.
Intermittent amber	An unrecoverable fault has been detected by the controller and product operation has been disabled. This state can be cleared by a button press combination (see table below) or removing power (including backup batteries) from the product.

If a fault occurs, please refer to the following table. Some faults with the unit may be easily corrected without the need for a site engineer to visit. Many faults can be cleared by resetting the board. To reset the system, switch off mains power briefly then switch the power back on again. Most faults should be cleared using this method, however, in the event the fault persists, please contact Glazing Vision for assistance.

Problem	Possible Cause	Action
Continuous blue Product has timed out.	The product has taken too long to open/close.	Check for possible obstructions or parts (e.g. sensors) that may have been knocked out of place. Once clear, press the open/close button.
Intermittent blue Overcurrent/undercurrent fault.	Something is preventing the mechanisms from opening/closing.	Check for and remove any obstructions to the mechanisms. Once clear, press the open/close button.
	The lid is frozen to the base.	Wait until the ice melts before attempting to operate the product.
	The product been left inactive for a long period (a month or longer).	This fault may occur after a long period of inactivity, reset the product (turn it off/on using the mains isolator switch) and try again.
Continuous red Synchronisation/initialisation state – the product needs to be initialised.	May occur after turning off/disconnecting the power when the mechanisms were not in the closed position.	Press the close button on the wall mounted control switch to initiate synchronisation of the mechanism(s). The status light will flash red whilst this is in progress.
Continuous amber A proximity (safety) sensor has been triggered – the product will not close.	Something is obstructing the path of the sensor beams.	Check for and remove any obstructions to the sensors.

<p>Intermittent amber Fault lockout state – controller is unable to reset itself and the product has been disabled.</p>	<p>Cause unknown.</p>	<p>Do not attempt to recover this fault without being in full view of the product, ask for assistance. To force a resynchronisation, press both the up and down buttons of the wall mounted control switch at the same time for two seconds. The control switch status light will then toggle through red, green and blue colours, finishing with red. Press the down button to close the product and initiate synchronisation (the status light will flash red whilst this is in progress). If one of the mechanisms fails to move or if the fault is triggered for a second time, do not attempt to try again, and if required refer to the manual override instructions to close the product.</p>
<p>The product opens or closes for no apparent reason.</p>	<p>The rain sensor (if specified) is dirty or still wet triggering the product to close.</p>	<p>If it is raining wait until the rain stops before trying to open the product. If the rain sensor needs cleaning, open the product and isolate the power supply, then clean the rain sensor.</p>
	<p>The thermostat (if specified) is reacting to a change in temperature and triggering the product to operate.</p>	<p>Check that the thermostat is set to the desired temperature setting.</p>
	<p>The BMS system (if specified) is operating the product remotely.</p>	<p>Check that the BMS system is functioning correctly.</p>
<p>The rain sensor is not working.</p>	<p>The rain sensor is located in a position where it is shielded from the rain or the sensor is dirty.</p>	<p>Check the positioning of the rain sensor and move it to a more exposed position (a Glazing Vision engineer may be required for this task). If the rain sensor needs cleaning, open the product and isolate the power supply, then clean the rain sensor.</p>

Glass Specification and Breakage Instructions

Glass Specification

Various options are available at time of order. If specific data is required for the glazing please contact your supplier for a glass data sheet covering the specification installed within your unit.

Breakage Instructions

Glass breakage is not covered under the product warranty. In the event of the glass being damaged please contact Glazing Vision for assistance.

Routine Testing and Maintenance

General Maintenance and Safety

To keep the Skydoor in good working order there are a few basic points that should be observed:

- Do not place anything on, or cause obstruction to the moving section of the product when opening the unit as this may cause damage to the unit's mechanisms and/or prevent it from opening.
- Do not walk or sit on the unit (except for the designated treadplate).
- Make sure that fingers and other obstructions are clear of the product and its mechanisms during any operation, severe damage/injury may be caused.
- Do not touch the motors/mechanisms after operating the unit as they may become hot.
- Do not remove the cover plate protecting the control board, as this may allow the controls to become damaged.
- Do not allow unauthorised persons (e.g. children) to operate the product as this may lead to injury or damage to the product.

Specific Maintenance Requirements

Maintenance must only be carried out by suitably qualified personnel*. The following maintenance requirements must be completed and logged on the sheets at the back of this manual. Glazing Vision can offer a service/maintenance contract – please contact us for further details.

*Suitably qualified assumes Glazing Vision Engineers or Approved Installers (installers that have attended a Glazing Vision installation training course for this product and carry 'Approved Installer' status), or an experienced electro-mechanical service engineer.

Monthly Requirements

- The product should be fully opened and closed to ensure that the seals are free, and the mechanisms function evenly.
- Lubricate (WD-40 Specialist High Performance Silicone Lubricant or equivalent) the hinges.

Annual Requirements (at least annual - recommended every 6 months)

- Check the integrity of the glazing unit (there should not be any misting or condensation).
- Check that all moving parts are free from debris.
- Lubricate (WD-40 Specialist High Performance Silicone Lubricant or equivalent) all moving parts and check they move freely.
- Check that the mechanisms are straight and true.
- Check that the proximity sensors are clean, aligned, secure and undamaged.
- Check that all fixings are appropriately tightened.
- Check that access to the overrides is clear and advise the relevant party to amend if not.
- Check all electrical cables and ensure that they are not trapped and/or damaged.
- Check that no water is in the unit.
- Clean and inspect all rubber/silicone seals, contact Glazing Vision to arrange for replacement seals to be fitted if required.
- Check that the gas struts are securely fixed in place and have not lost pressure/leaking.
- Check that electrical connections are well made and secure.
- Check that the control switch does not show any errors.
- Test the operation.
- Test any optional extras present.

Every 5 Years

- Replace backup batteries (if present).

Cleaning Requirements

Regular cleaning should be carried out, increasing the frequency if the area is subject to excess debris such as falling leaves or heavy soiling from atmospheric pollution. Due to the Skydoor’s unique bonding method and the pitch built into the upstand, there should be no water ponding on the glass when installed correctly.

Any standard glass cleaning product can be used to clean the glazing unit. However, take care not to use abrasive materials or cleaners as this may affect the unit and its finish. The framework of the unit can be cleaned using warm soapy water with a soft lint free cloth. It is important to avoid getting water into the internal channels of the product framework. Therefore, Glazing Vision highly recommends carrying out any cleaning of the product whilst in the closed position.

- Clear any debris from and around the unit.
- Clean the glass and inspect the integrity of the glazing unit.
- Clean the frame and inspect the finish integrity.
- Clean and inspect all rubber/silicone seals, contact Glazing Vision to arrange for replacement seals to be fitted if required.
- Clean the rain sensor (if present).

Disposal at End of Life

Glazing Vision design products with ease of recyclability at end of life in mind. Many of the main components used are widely recyclable and we encourage you to recycle the unit and/or dispose of the component parts responsibly, in accordance with the guidance from your local authority.

This product comprises the following materials:

Aluminium framework and corner brackets	Widely accepted for recycling at local recycling depots.
Stainless steel (Fixings, nuts, bolts, screws, brackets etc.)	Widely accepted for recycling at local recycling depots.
Glass	Widely accepted for recycling. Check disposal locations with your local recycling depot.
PVC/nylon/plastic	Recyclable - check disposal with your local recycling depot.
Rubber seals and silicone sealant	Not currently recyclable.
Electrical components	If your unit is repaired or decommissioned by Glazing Vision, we will remove and recycle the electrical components under our producer obligations. Alternatively, please dispose of as Waste Electrical and Electronic Equipment (WEEE) at your local recycling depot.
Batteries	If your unit is repaired or decommissioned by Glazing Vision, we will remove and recycle any batteries under our producer obligations. Alternatively, please dispose of as segregated battery waste at your local recycling depot.

Security and Certification

The Skydoor is designed with security as a priority. The mechanisms cannot be back driven and cannot be tampered with from the outside. It is tested to LPS2081 Issue 1:2015. It is approved by the Loss Prevention Certification Board (Cert/LPCB ref: 1347a) and Secured by Design:

Secure (Security Rating A)

The inner pane must be at least 8.8 mm PVB laminated glass (two 4 mm thick panes separated by an 0.8 mm thick PVB interlayer).

Secure+ (Security Rating B)

The inner pane must be at least 9.5 mm ionomer laminated glass (two 4 mm thick panes separated by a 1.5 mm thick ionomer interlayer).

Serial Number

Each Glazing Vision product has a unique serial number. A label giving this serial number is affixed to the exterior of each Skydoor. This number should be recorded within the maintenance log section of this manual for future reference. If you need to contact us for any reason, Glazing Vision may ask for the product's serial number to enable us to assist with your enquiry.



Warranty Information

A warranty document will be provided with the product. If this is misplaced it can be found at www.glazingvision.co.uk/resources/warranties. To ensure the warranty is maintained, the product must be regularly maintained/serviced in accordance with the instructions in this manual.

Maintenance Log

Project Address:

Unit Serial Number:

Work Completed	Notes	Name	Date
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			

Work Completed	Notes	Name	Date
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			
Annual Requirements yes/no Battery Replacement yes/no Cleaning Requirements yes/no			